



**RAY-O-LITE Pty Ltd**

*Making roads worldwide safer for over 40 years*

PO Box 1156

UNANDERRA NSW 2526


Phone (02) 4271 5056

Mobile (0407) 473 889

Email: [admin@rayolite.com.au](mailto:admin@rayolite.com.au)



**“Ray-O-Stud”  
Reflective City Marker**

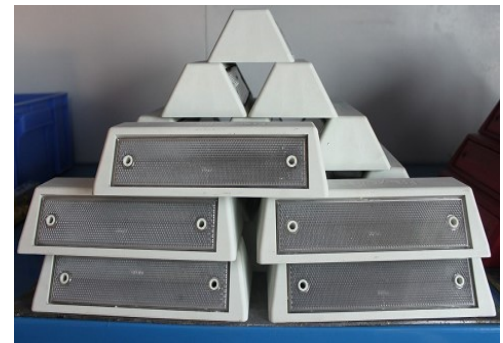

**INSTALLATION INSTRUCTIONS**

<b>SURFACE PREPARATION</b>	Surface should be dry and clean of dust and debris. Sweep away with a hand broom any loose materials. To ensure the substrate is free of moisture, it is advisable to lightly heat the substrate to test for any moisture.
<b>APPLICATION</b>	Ray-O-Stud City Markers can be successfully applied using two part approved road marker epoxy (recommended), bitumen pad, or bitumen adhesive. Refer respective adhesive manufacturer’s installation for correct method of application and application temperatures. Optional “ <i>anchor</i> ” fix using fixing bolts, simply drill out holes in bottom of base to top section – countersink top to suit fixing used.

Flyer Ray-O-Stud

**View our full range of products at**  
[www.rayolite.com.au](http://www.rayolite.com.au)

